

Impedance

IMPEDANCE TABLE OF SIC 2240


WATT	100 V	70V
20 W	500 Ohm	245 Ohm
10 W	1 kOhm	490 Ohm
5 W	2 kOhm	980 Ohm
2.5 W	NA	1.96 kOhm

IMPEDANCE TABLE OF SIC 2260

WATT	100 V	70V
30 W	333.33 Ohm	163.33 Ohm
15 W	666.66 Ohm	326.66 Ohm
7.5 W	1.33 kOhm	653.33 Ohm
3.75 W	NA	1.3 kOhm

NOTE: The combined impedance of the system should not fall below the above specified IMPEDANCE rating

Schematic

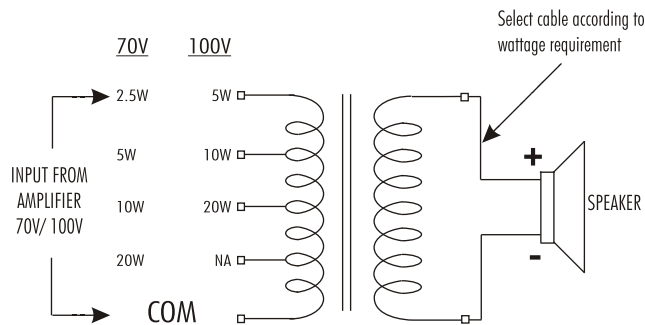

Specifications

	SIC 2240	SIC 2260
DESCRIPTION	2 way in-ceiling speaker with back can	2 way in-ceiling speaker with back can
TRANSDUCER	1 x 4" coaxial	1 x 6" coaxial
FREQUENCY RANGE (-10 dB)	90 Hz ~ 20 kHz	70 Hz ~ 20 kHz
FREQUENCY RESPONSE (-3 dB)	110 Hz ~ 18 kHz	85 Hz-18KHZ
SPL (1W/1M)	87 dB	88 dB
SPL AT RATED POWER 20 W	97 dB	98 dB
NOMINAL IMPEDANCE	8 Ohm	8 Ohm
POWER HANDLING direct mode	20 W	30 W
POWER TAP 70V	2.5,5,10,20 W	3.75,7.5,15,30 W
POWER TAP 100V	5, 10, 20, NA W	7.5,15,30, NA W
OUTER DIAMETER	171 mm	240 mm
CUT-OUT DIAMETER	143 mm	208 mm
COLOUR	White	White
GROSS WEIGHT	1 kg	2.2 kg

Due to continuous improvements, all specifications are subject to change




A product of the Mukherjee Innovation Centre

Manufactured by Sonodyne Electronics Co Pvt Ltd, 98 NB Block E New Alipore, Kolkata 700053, INDIA
1-800-123-37-36, response@sonodyne.com
Please visit us at www.sonodyne.com




SIC 2240/2260

in-ceiling monitors | owners manual

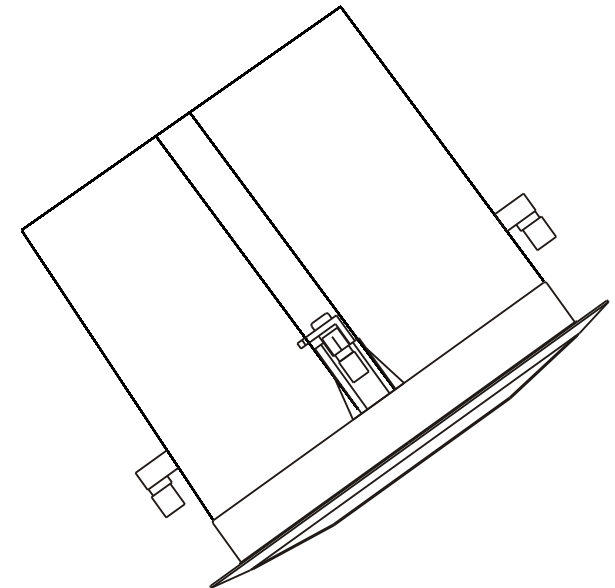


Mounting Details


STEP-1

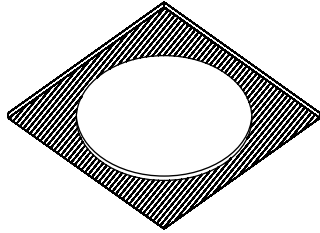


STEP-2

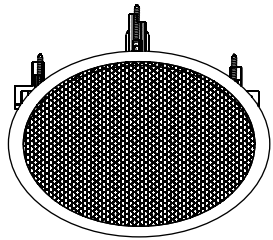


STEP-3

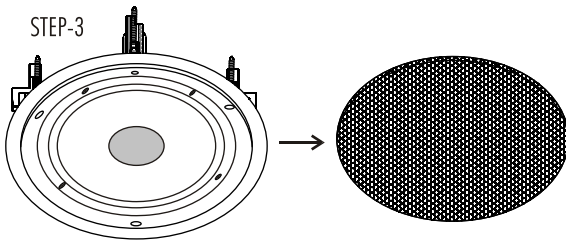

STEP-4

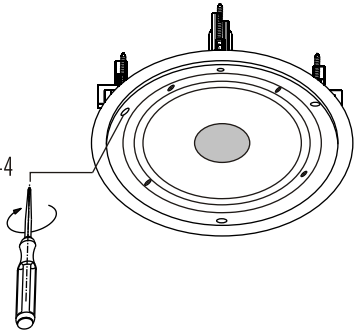

STEP-5

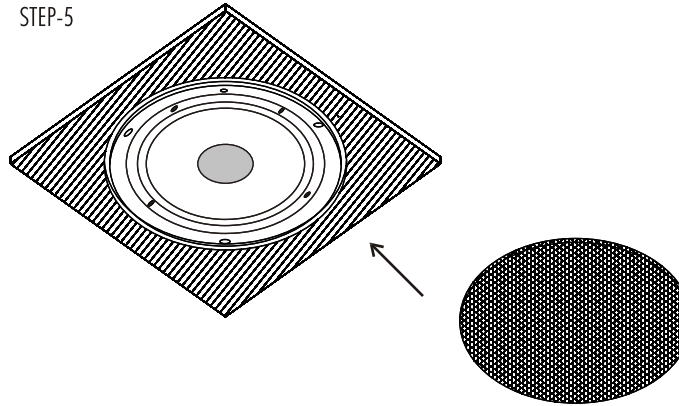


Follow the steps given below for mounting the SIC series ceiling speakers:

- STEP 1. Make a cut-out in the ceiling or the surface where the SIC series ceiling speaker is to be installed, as per Fig1. Make sure there is enough room for the height inside the false ceiling.
- STEP 2. Make the necessary connections to the SIC series(Refer to Fig-2)
- STEP 3. Remove the grill of the speaker with the help of the grill opener provided.
- STEP 4. Holding the speaker with the magnet facing upward (make sure you do not touch the drive unit) slide it through the ceiling cut-out so that the plastic frame comes to rest against the ceiling. Now tighten the 4 adjusting screws one by one. (Tightening the screws will pull the dog-ears towards the ceiling till it makes firm contact. While sliding the speaker through the cut-out, make sure the dog-ears are not projecting outwards)
Warning: Do not over-tighten the screws. Care must be taken while tightening so that the drive unit does not get damaged.
- STEP 5. Fit the grill back in to the speaker


Mounting Instructions

Cut-Out & Connections

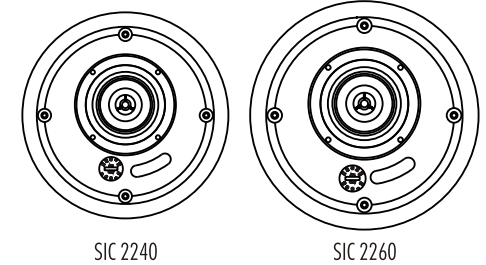

MODEL	CEILING CUT OUT (DIA)	MAX HEIGHT	OVERALL DIA mm
SIC 2240	143.0 mm	115.0 mm	171.0
SIC 2260	208.0 mm	86.0 mm	240.0

Fig. 1

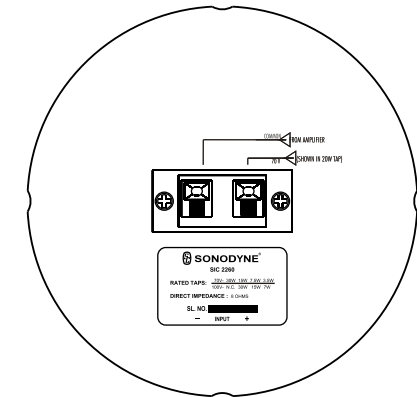

There is a push type terminal at the rear. Connect the wires from 70V terminal of amplifier to - and + terminals. Please take care to observe correct polarity. Please note that if you connect to the 100V terminal of the amplifier, you will get double the wattage as shown on the rotary switch marking. However, you cannot connect the 100V line to the highest tap as this will exceed the maximum wattage of the transformer.